






iKeyp Mobile Application

The intelligence of the iKeyp Smart Safe rests comfortably in the hands of its owner through the iKeyp mobile application. The iKeyp smart safe and app can be the gateway to your overall health and privacy in addition to the foundation of a safe home.

By using the included iKeyp mobile app, iKeyp smart safe owners can log in to a personalized home page which provides access to commonly used functions such as remote opening, notifications and reminders. Also adding to the rich user experience is a dashboard and access settings. Application sharing and multi-level user permissions provide additional oversight when needed.

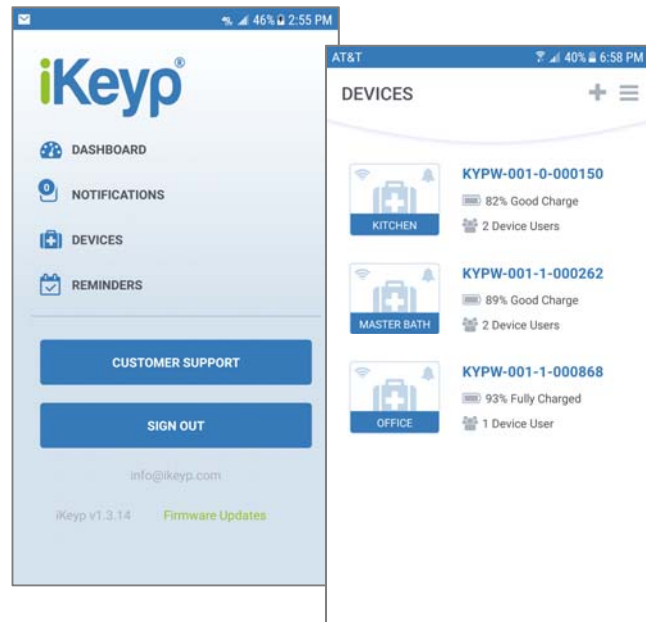

iKeyp Mobile Dashboard

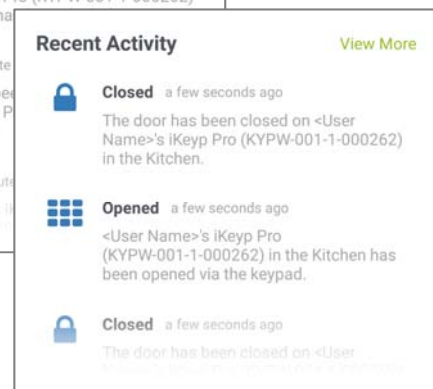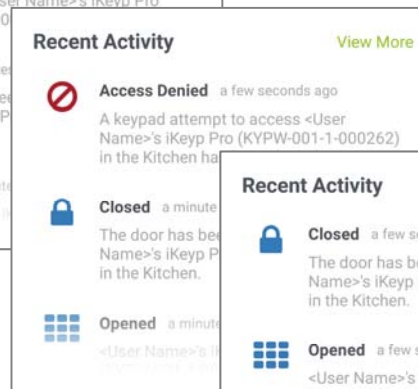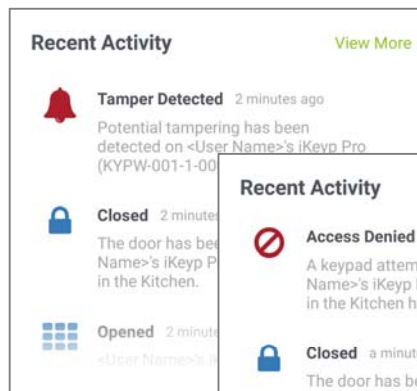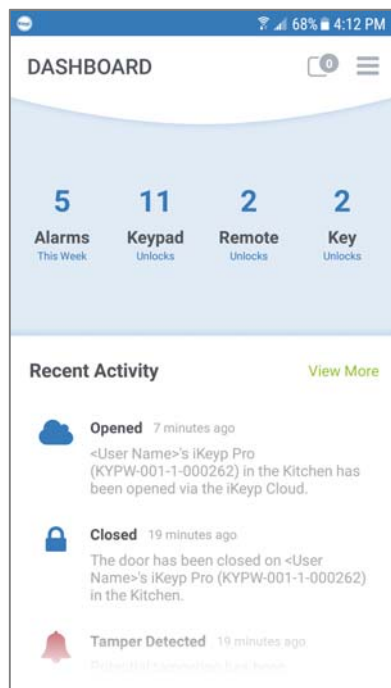

At a glance, users can see recent notifications and weekly summaries of activities.

iKeyp Security

The iKeyp app always has your back. It will notify you in real-time on your smartphone if someone tries to tamper with your iKeyp by either striking, moving or tilting the safe. It will also let you know if someone has entered an incorrect code in an attempt to open it or if the backup key was used. The iKeyp Safe is protected 24x7 with multiple sensors monitoring the continuous state of your contents. If the iKeyp app is quiet, all is good, and you have peace of mind.

iKeyp Security Alert Types

- Tamper Detection
- Incorrect Access Code Attempt
- Multiple Incorrect Code Lockout
- Door Remains Open
- Backup Key Used
- User Access Code Change

Other iKeyp Security Features

- Fully Encrypted from Safe to Server.
- Two-factor Remote Open Authentication Enforced
- Secure Over-the-Air (OTA) updates via Wi-Fi allow the safe to automatically receive new firmware releases in the future.
- The iKeyp is online for only seconds a day, minimizing external threats and conserving energy at the same time.

iKeyp System Notifications

 iKeyp App 6:50 PM ^

iKeyp App

SECURITY ALERT: <User Name>'s iKeyp Pro in the Master Bath has reported that the safe door has been left open for at least 3 minutes. Please check that the iKeyp Pro has been closed properly.

 iKeyp App 5:40 PM ^

iKeyp App

DOOR OPEN NOTIFICATION: <User Name>'s iKeyp Pro in the Kitchen has been opened with the backup key.

3:53 PM ^

iKeyp App

SECURITY ALERT: <User Name>'s iKeyp Pro is reporting a potential tampering or theft to the iKeyp Pro in the Kitchen.

3:52 PM ^

iKeyp App

DOOR OPEN NOTIFICATION: <User Name>'s iKeyp Pro in the Kitchen has been opened with the iKeyp Pro keypad.

3:52 PM ^

iKeyp App

SECURITY ALERT: An incorrect access code has just been entered on <User Name>'s iKeyp Pro in the Kitchen. Someone may be attempting to open the iKeyp Pro.

7:05 PM ^

iKeyp App

DOOR OPEN NOTIFICATION: <User Name>'s iKeyp Pro in the Master Bath has been opened remotely.

iKeyp Medication and other Reminders


The iKeyp application provides an easy interface for users to program recurring or one-time reminders. Simply choose the category of reminder you want to set, describe it with a friendly name and assign it to an iKeyp's Smart Safe you have access to. Set an every day reminder or an ad-hoc quick reminder to take something out of your safe so you always have what is important with you.

Reminder Item Categories:

- Medications
- Personal Identifications
- Keys
- Access and Employment IDs
- Small Electronics
- Jewelry
- Personal Items

Reminder Frequency Options:

- Recurring
- One-Time

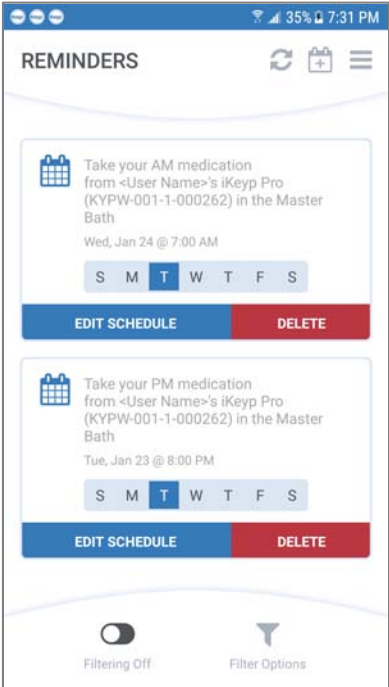

iKeyp Intelligent Reminders

iKeyp App 8:15 PM ^
iKeyp App
Did you forget to take your PM medication from <User Name>'s iKeyp Pro (KYPW-001-1-000262) in the Master Bath 15 minutes ago?

Forgotten Medication Reminder

8:00 PM ^
iKeyp App
It's time to take your PM medication from <User Name>'s iKeyp Pro (KYPW-001-1-000262) in the Master Bath.

On-Time Medication Reminder

7:45 PM ^
iKeyp App
Remember to take your PM medication from <User Name>'s iKeyp Pro (KYPW-001-1-000262) in the Master Bath in 14 minutes.

Advance Medication Reminder

iKeyp User Programmable Settings

These features may be set by the user on the web portal, and in some cases, on the mobile application.

Keypad Beep

Users may turn on or off the audible feedback for the keypad. The default setting is “on”.

Keypad Beep Duration

This setting allows a user to program how long the beep duration will sound for when a key is pressed on the keypad. The setting is in milliseconds and preset to 300 milliseconds or 0.3 seconds.

Keypad Access Lockout Duration

This setting allows the user to customize how long the lockout duration for the safe will be if three incorrect code attempts have been made in a row. The setting is in seconds and is preset to 180 seconds or 3 minutes. After three incorrect code attempts, the keypad will not accept any entries for the set duration. The safe can however be opened with the backup key or remotely at any time.

Door Open Timeout

Users may set the time that the door is allowed to remain open before sounding the alarm. A short alarm is sounded at the set interval while a second, longer alarm will sound at twice the set interval. The setting is in seconds and preset to 180 seconds or 3 minutes for the short alarm and 360 seconds or 6 minutes for the longer alarm.

Alarm Duration

Users may set the time the alarm will sound during an alarmable event. The setting is in seconds and preset to 180 seconds or 3 minutes.

Toggle Motion Detection On/Off

The iKeyp is shipped from the factory with the motion detection setting toggled to the “off” position. This setting allows the user to toggle the motion detection feature back and forth between “on” and “off”.

Access Code

Users may change the user access code remotely from 4 to 8 digits in length. This may also be performed directly on the safe itself if needed.

User Selectable Notification Categories

The iKeyp Mobile App provides users with the ability to filter their alerts by notification type. The first four notification categories are pre-selected when the mobile app is installed, for more advanced users, the entire list can be completely customized. Please note that full auditing and exporting functionality of all event data can be found through the iKeyp web interface.

iKeyp Notifications Category List

- Door Open Events
- Door Closed Events
- Security Events
- Door Left Open Alerts
- Settings Updated
- Updates Available
- Name or Installed Location Changes
- Early Reminders
- Device Reminders
- Reminder Alerts
- Wi-Fi Connection Events
- Wi-Fi Sleep Events
- Unlock Requests
- Settings Change Request
- Firmware Updates
- Firmware Requests
- Firmware Update Responses
- Firmware Downloads
- Unlock Responses
- Settings Change Responses